

IMPORTANT! PLEASE READ

All Outdoor Expressions weather gauges/clocks are prepared with a powder coated/painted finish. Gauges will weather over time, depending upon the environmental conditions where the gauge is installed. Your proper care of the gauges (see below) will enhance both the life and appearance of the gauges. Post treatments, such as clear lacquer, are not recommended.

PROPER CARE

In order to maximize the appearance of a **Outdoor Expressions** gauge, it is important that dust and debris is removed from the surface of the gauge periodically. It is recommended that the gauges be wiped down weekly using a soft, dry cloth.

DO NOT use any abrasives such as car wax or other polishes, glass cleaners or chemicals, as this will scratch /remove/damage the protective coating. All **Outdoor Expressions** gauges receive a durable powder coat finish, which enhances the durability of the gauge. The finish should also be wiped down weekly with a soft, dry cloth to remove dust and debris that will accumulate on the surface.

FAILURE TO FOLLOW THE ABOVE CARE INSTRUCTIONS WILL VOID THE WARRANTY OF THE GAUGE

For information regarding replacement parts, please write to:
Craftmade, P.O. Box 1037, Coppell, TX 75019

Please send the following information:

1. The model number and finish - Black, Rust, etc.
2. The name of the part - if you have a parts problem.
3. Your name, mailing address and phone number (with area code).

 
LIMITED WARRANTY

Outdoor Expressions warrants against defects in material and workmanship for a period of ONE (1) YEAR from the date of purchase for use, and agrees to repair or, at our option, replace a defective unit without charge.

IMPORTANT: This warranty does not cover damage resulting from accident, misuse or abuse, lack of reasonable care (see above). The warranty does not cover failure due to accidents, abuse, misuse, vandalism, and acts of nature such as lightning damage. No responsibility is assumed for any special incidental or consequential damages. Damages occurring during transit are not covered by this warranty.

To obtain warranty service, mail receipts as proof-of-purchase date, and a brief explanation of the nature of the defect, to P.O. Box 1037, Coppell, TX 75019. You will receive, by mail, a Return Goods Authorization number issued by **Outdoor Expressions**, and returned freight prepaid. For installation or Technical Support, call 1.800.548.3788, 8 a.m. - 5 p.m., Central Time, Monday thru Friday.

 
 

 


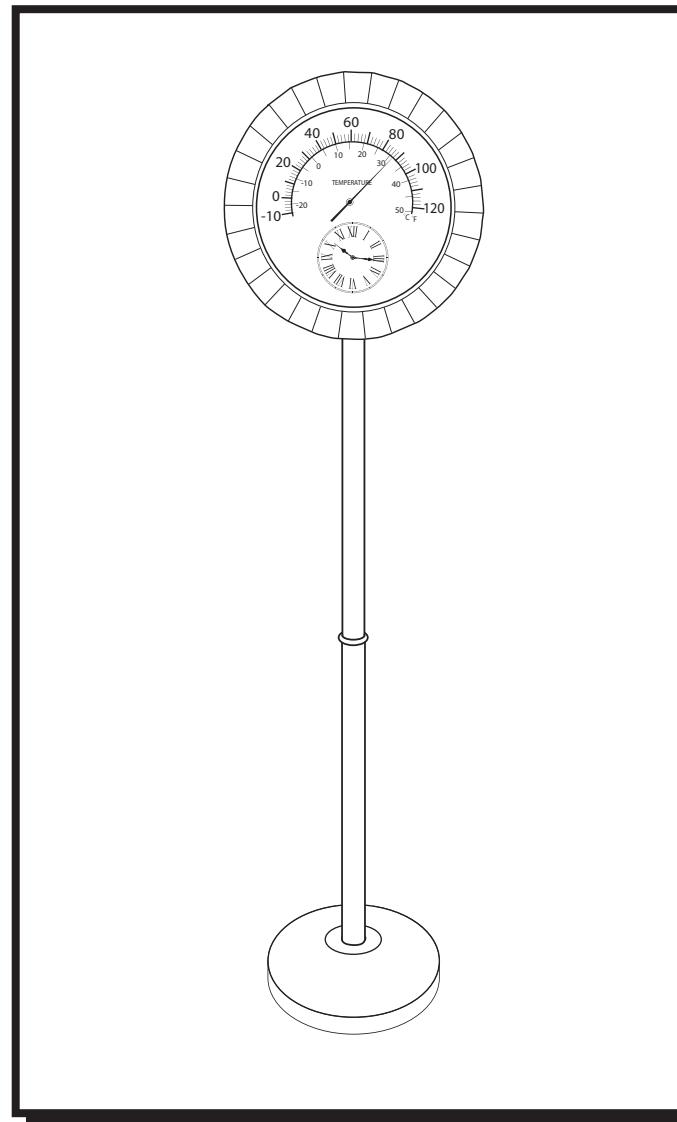 

Outdoor Expressions
650 S. Royal Lane
Coppell, TX. 75019



**GA102 Thermometer/Clock
Assembly Instructions**

GA102 Thermometer/Clock Assembly

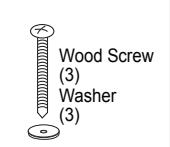Parts Included:

 <p>Wood Screw (3) Washer (3) Lock Washer (3) Lag Bolt (3)</p>	 <p>Hex Nut (3) Washer (3)</p>	 <p>"H" Stake (optional) 1 Ea.</p>	 <p>Base Cover 1 Ea.</p>	 <p>Single Sided Head 1 Ea.</p>
		 <p>Allen Wrench 1 Ea.</p>	 <p>Poles 2 Ea.</p>	 <p>Base 1 Ea.</p>

Assembly Time:

Time: 20-30 minutes

Tools Required: Adjustable Wrench, Allen Wrench (included)

Usage:

When using this weather station outside, place unit in shaded area away from direct sunlight for most accurate reading of gauges, as direct sunlight may cause some deviation in gauge readings.

Assembly:

Step 1: Base can be installed with stake for insertion into grass/soil surfaces, lag bolts for cement surfaces or wood screws for deck installation. If stakes are used, find level, firm grass/soil area for inserting stakes. If lag screws are used, insert lag screw and secure top portion onto base using lock washer, washer and hex nut. If wood screws are used, screw firmly onto level wood surface. Slide base cover down to fit over base. Attach center pole (A) to the base. Secure with hex nut on the under side of the base. Attach center pole (B) to center pole (A).

Step 2: Attach clock/temperature display head to center pole by screwing the head to the center pole.

 
Adjustment:

- Clock adjustment:** The clock is adjusted by the knob clearly marked "CLOCK" on the back of the gauge.
- Temperature gauge adjustment:** Remove Protective Cap (Fig. 1). Temperature is adjusted by the knob shown on the Figure 2.
- Replacing Battery:** Insert battery matching the "-" and "+" markings as indicated on the inside of the battery housing, to the markings located on the battery. Requires 1 "AA" Battery.

 
Troubleshooting (Adjusting Gauges): The various gauges contained in this product are calibrated to reflect the current atmospheric conditions present during the time of this product's assembly. Vibration during the transportation of this product may alter the preset readings and accuracy of each gauge. To ensure the proper reading of each gauge, it is suggested that each unit be checked for accuracy before use. For accurate atmospheric measurements refer to a reliable source such as the newspaper, television, radio, and/or the internet. If adjustment is necessary, please follow the inside instructions for each gauge.

Note: Outside clocks must be brought inside when outside temperature drops below 20 degrees (F).

Step 1

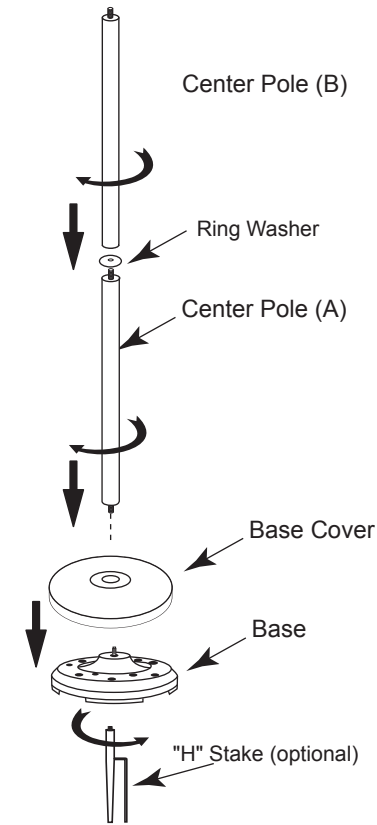

Step 2

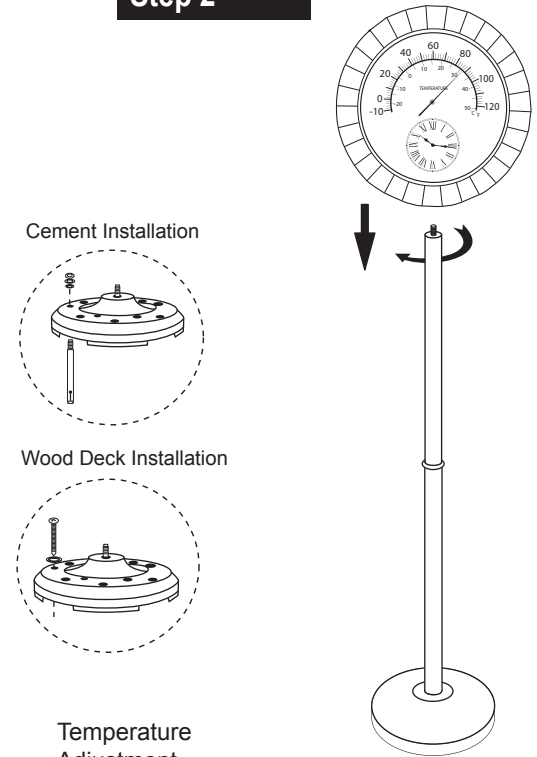

Adjustment:

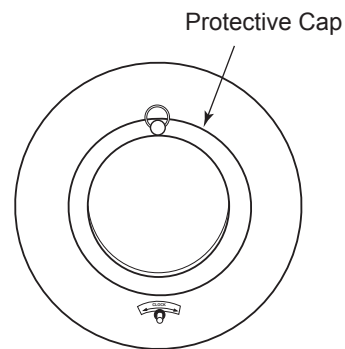 


Figure 1

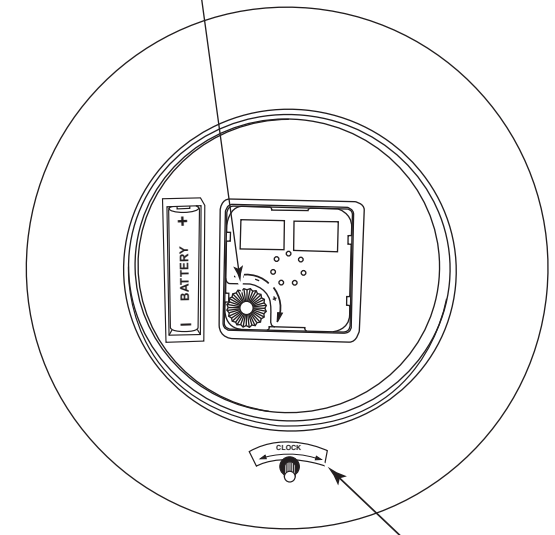 


Figure 2

Note: Temperature gauge accuracy is +/- 2 degrees Celsius or +/- 3 degrees Fahrenheit. Humidity gauge accuracy is +/- 5%.